

Home Product Import GmbH
Graf - Zeppelin - Str. 5
D - 46149 Oberhausen
Germany

Tel. : +49-(0)208-9949330
Fax.: +49-(0)208-99493930
e-mail: info@h-p-i.de

LEDs Removal Instructions for LED Luminaire LED 燈具的 LEDs 拆卸說明 / LED 灯具的 LEDs 拆卸说明

HPI Article Nr. (HPI 产品编号) :	180,004962	Date (日期) :	Montag, 18. März 2024
HPI Model Name (HPI 型号名称) :	GINN	Revision Date	-
Vendor Name (供应商名称) :		(修订日期) :	
Vendor Item Nr. (供应商产品编号) :	DXX-091304-AL	Version Nr. (版本号) :	1

Procedure how to remove the LEDs from the luminaire (in text form):


如何從燈具中移除 LED 的程序（以文本形式） / 如何从灯具中移除 LED 的程序（以文本形式）：

Step 1-2 步驟/步骤 1-2	Loosen the screw of the base and take out the hanging board
Step 3 步驟/步骤	Cut the wires between the light source and the driver
Step 4 步驟/步骤 4	Use a screwdriver to loose the panel
Step 5 步驟/步骤 5	Open the panel
Step 6 步驟/步骤 6	remove all the thing, such as Diffusion plate
Step 7-8 步驟/步骤 7-8	Loosen the nuts inside the chassis to facilitate disassembly of each frame
Step 9 步驟/步骤 9	remove the silicone of the frame
Step 10 步驟/步骤 10	Use a soldering iron to separate the wires of the LED (note. do not burn the LED beads with the soldering iron).

Drawings of how to remove the LEDs from the luminaire (without damaging the luminaire itself) corresponding to the above steps.

與上述步驟對應的如何從燈具中移除 LED（不損壞燈具本身）的圖示

与上述步骤对应的如何从灯具中移除 LED（不损坏灯具本身）的图示

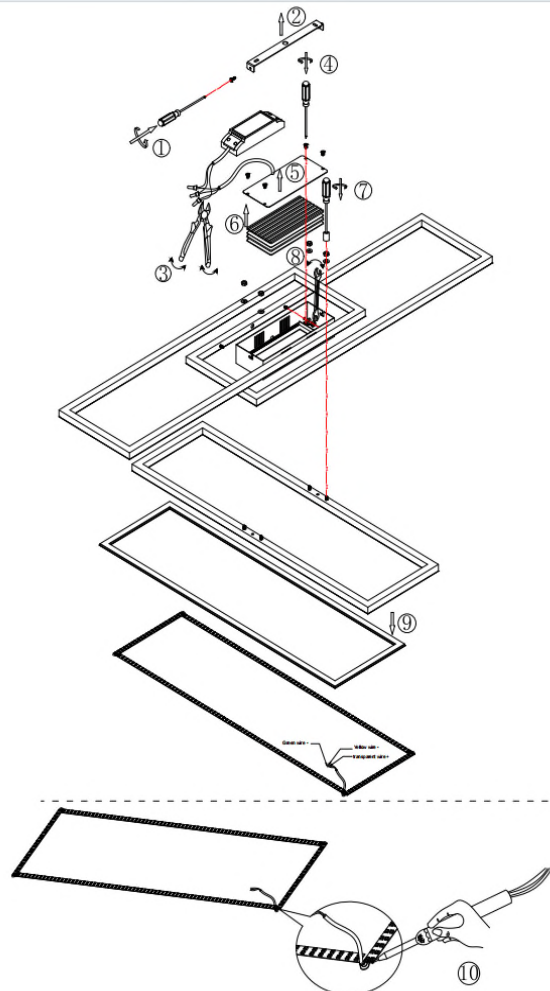

Prepared By (准备个人姓名) :	Yuni Chen
Jon Title (职称) :	Sales
Company Name (公司名称) :	

Signature with Company Chop
(负责人签字加公司印章) :