

Home Product Import GmbH
Graf - Zeppelin - Str. 5
D - 46149 Oberhausen
Germany

Tel.: +49-(0)208-9949330
Fax.: +49-(0)208-99493930
e-mail: info@h-p-i.de

LEDs Removal Instructions for LED Luminaire LED 燈具的 LEDs 拆卸說明 / LED 灯具的 LEDs 拆卸说明

HPI Article Nr. (HPI 产品编号):	180,005025	Date (日期):	Freitag, 30. August 2024
HPI Model Name (HPI 型号名称):	TOSO	Revision Date	-
Vendor Name (供应商名称):		(修订日期):	
Vendor Item Nr. (供应商产品编号):	MIY-B2106	Version Nr. (版本号):	1


Procedure how to remove the LEDs from the luminaire (in text form):

如何從燈具中移除 LED 的程序（以文本形式） / 如何从灯具中移除 LED 的程序（以文本形式）：

Step 1-1 步驟/步骤	Disconnect the power supply and loosen the mounting screws
Step 1-2 步驟/步骤	Loosen the power cable and remove the light fixture
Step 1-3 步驟/步骤	Cut through the adhesive with a suitable knife and remove the lens
Step 1-4 步驟/步骤	The right screwdriver prys off the reflective cap
Step 1-5 步驟/步骤	Use a soldering iron to separate the LED's wires (note. Don't burn LED beads with a soldering iron)

Drawings of how to remove the LEDs from the luminaire (without damaging the luminaire itself) corresponding to the above steps.

與上述步驟對應的如何從燈具中移除 LED（不損壞燈具本身）的圖示
与上述步骤对应的如何从灯具中移除 LED（不损坏灯具本身）的图示

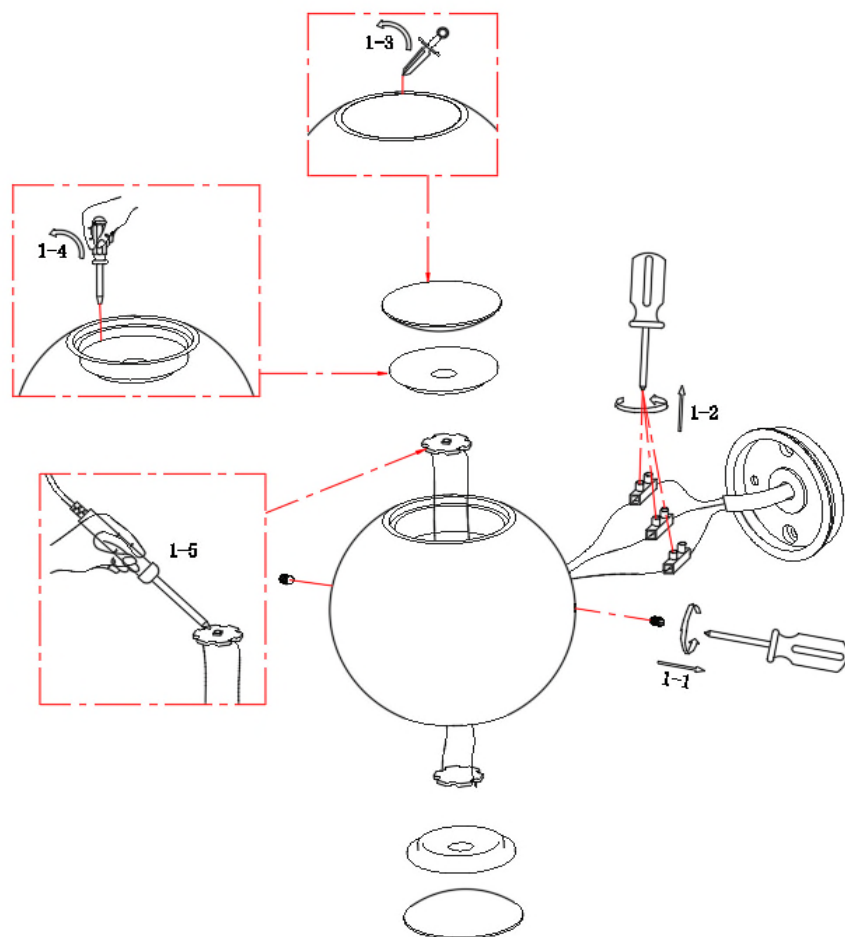

Prepared By (准备个人姓名) :	Yuni Chen
Jon Title (职称) :	Sales
Company Name (公司名称) :	

Signature with Company Chop
(负责人签字加公司印章) :