

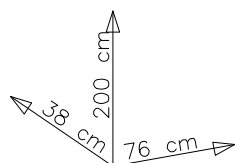
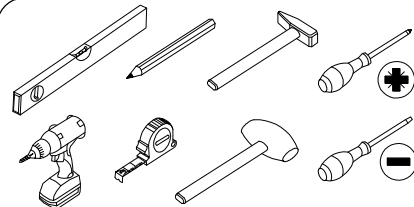
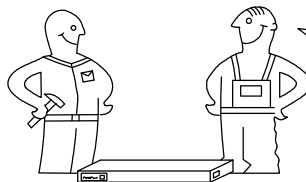
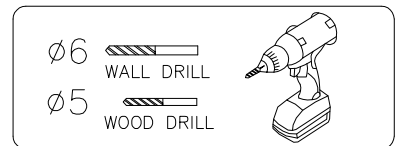
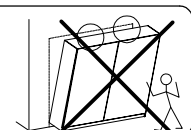
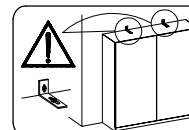
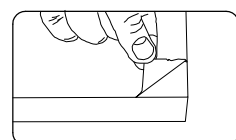
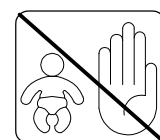
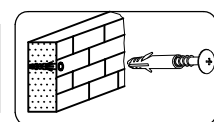
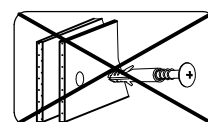
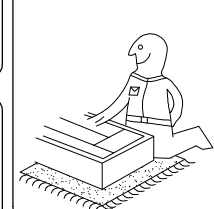
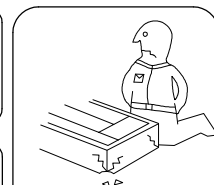
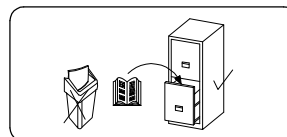


TIRA



30 E6 HH 01

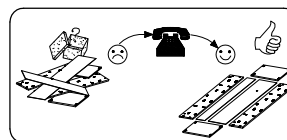

#	ART. NR	L	W	T	Q	Col.No
1	8000	1936	355	16	1	3
2	8001	1936	355	16	1	3
3	8002	721	335	16	1	1
4	8003	721	335	16	4	1
5	8005	1930	308	16	1	2
6	8004	752	380	22	2	1
7	8006	965	308	18	1	2
8	8007	965	308	18	1	2
9	8008	1936	64	22	2	3
10	8009	1951	368	2,5	2	3
11	8010	211	211	16	1	1



$\varnothing 6$ WALL DRILL
 $\varnothing 5$ WOOD DRILL

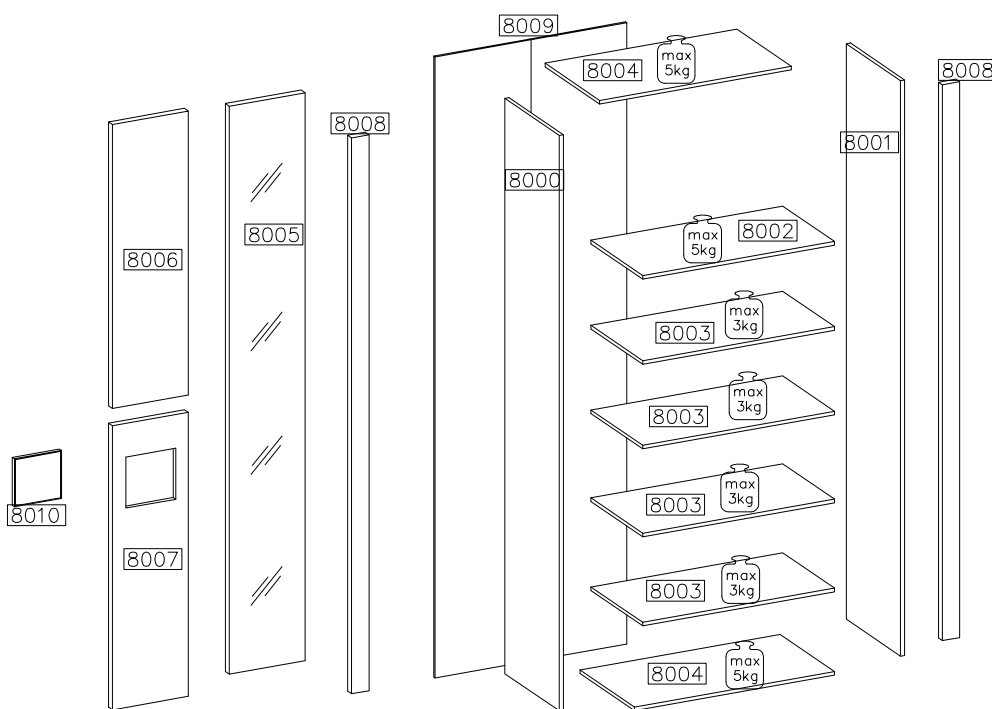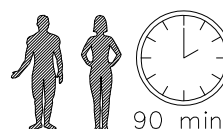

										
12	2	8	6	6	6	8	8	8	2	4
										
12	14	1	6	5	16	2	16	52	1	1
										
16	1	1								

1

Ø8x30mm



A

4




J4

8



D1

2

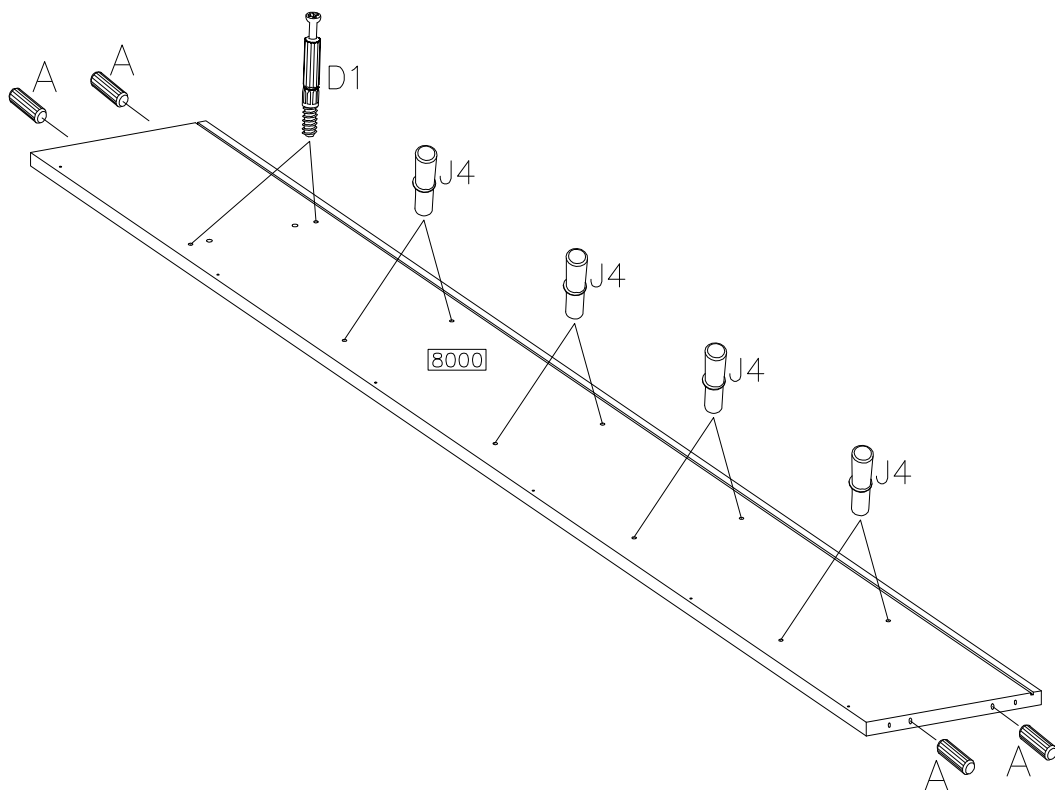

2

Ø8x30mm



A

4

Ø4.0x16mm



P8

24

H=2



H4

8



J4

8




D1

2



F9

12

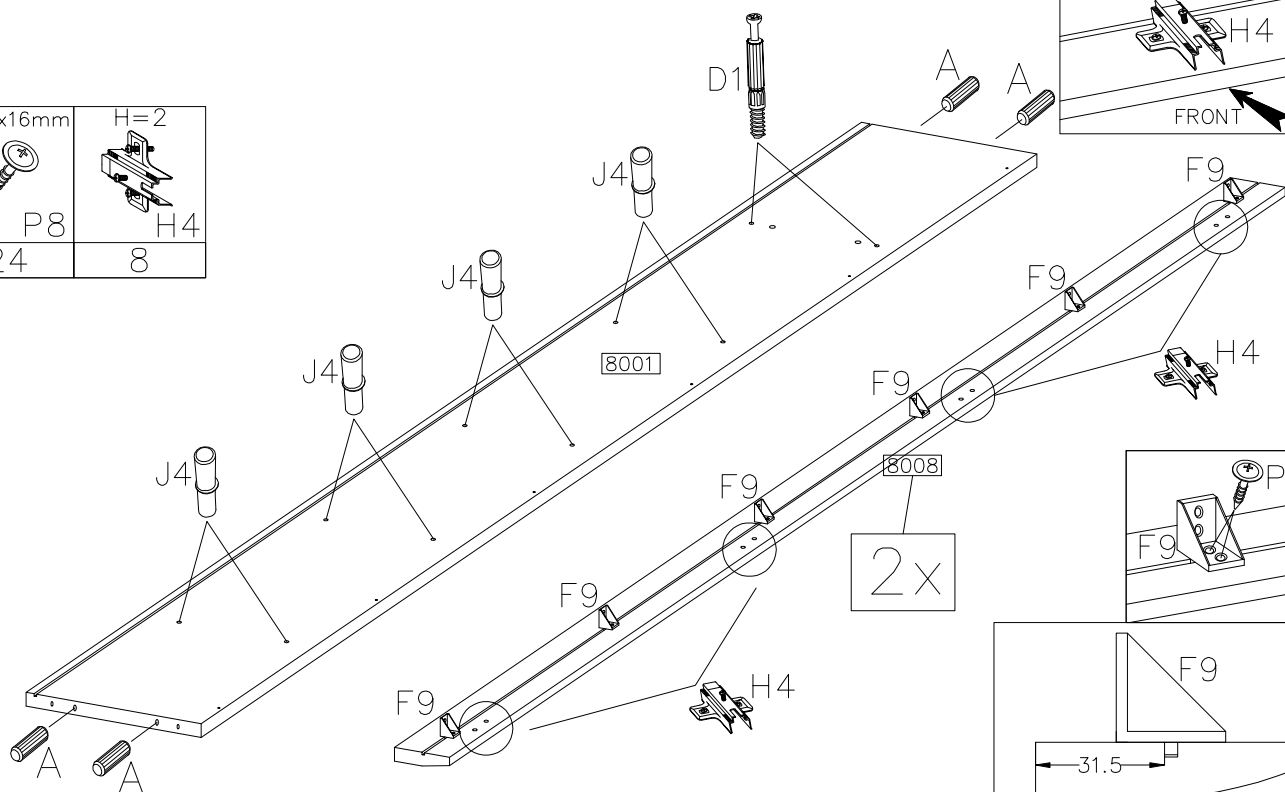

3

Ø8x30mm



A



4

Ø15/12mm



C

4

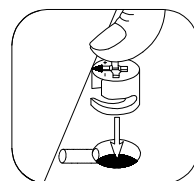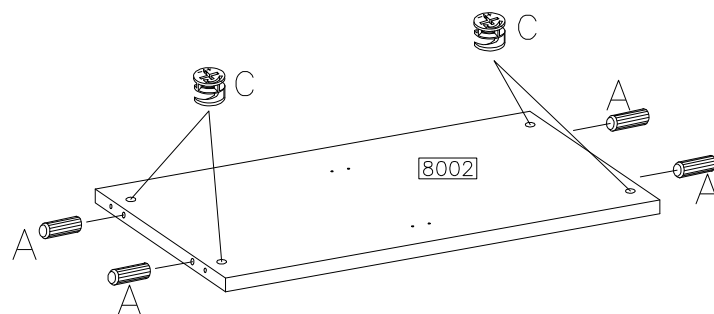


4

Ø4.0x16mm



P8

24


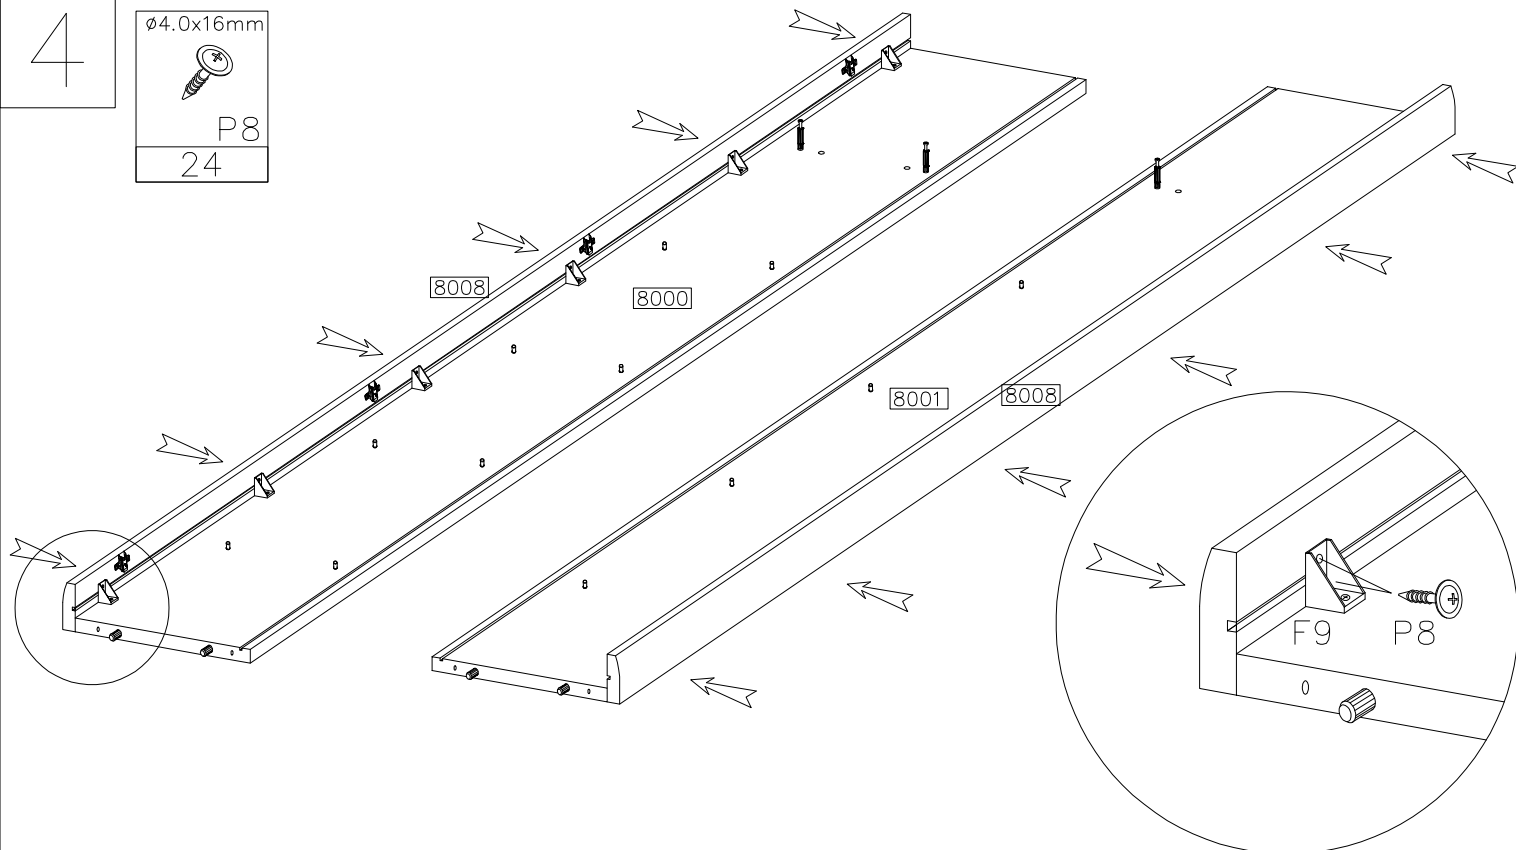


5



E

4

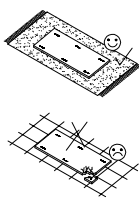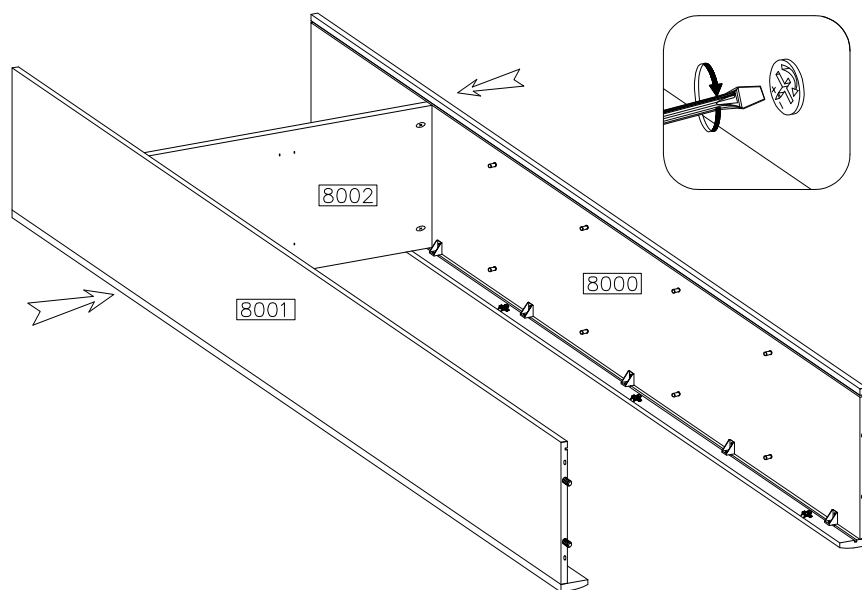

6





B

4




E1



4

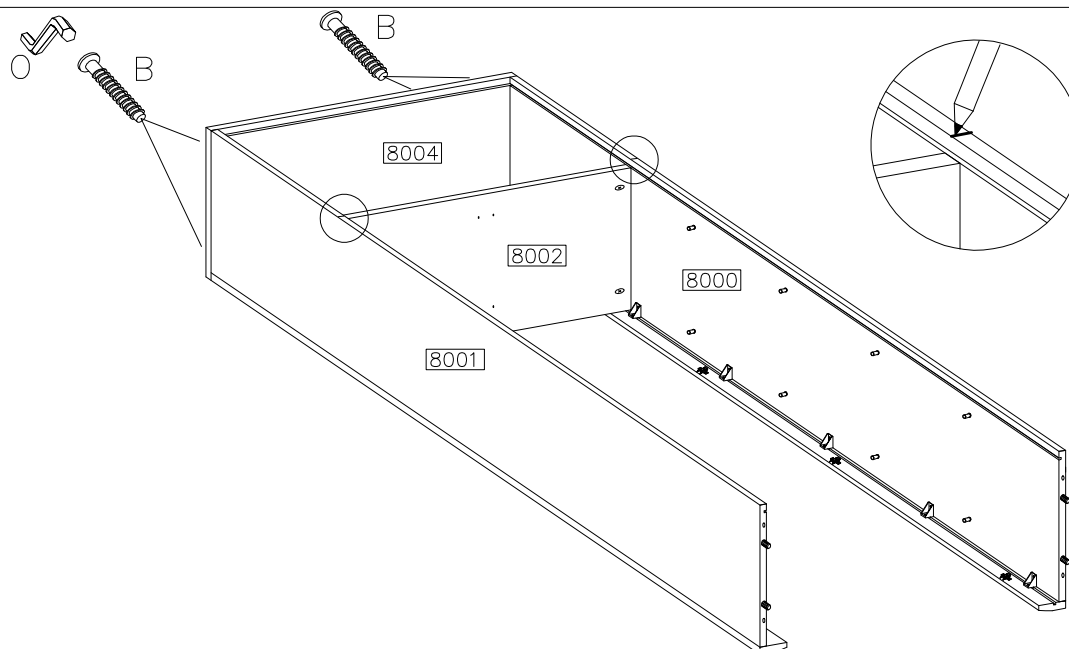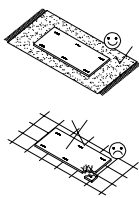








7

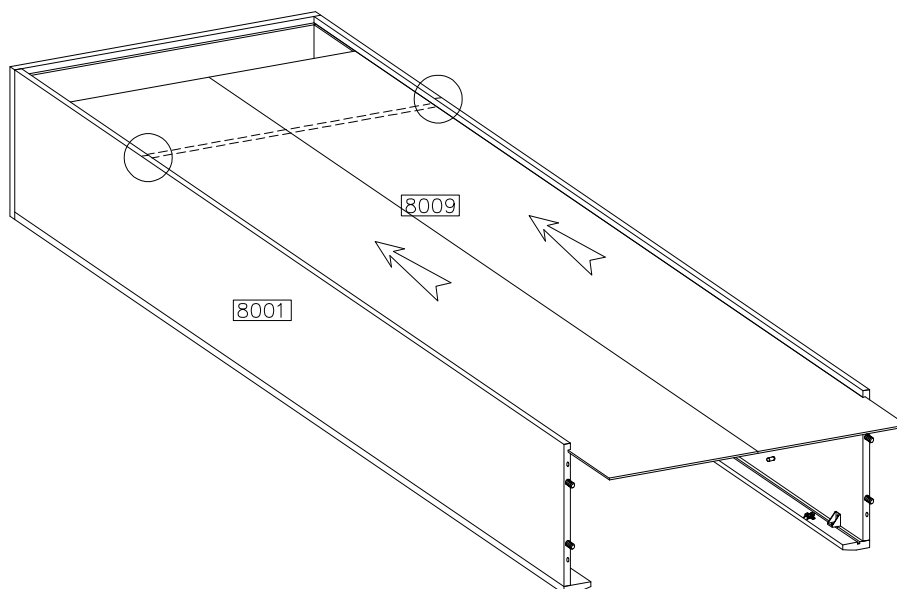

8

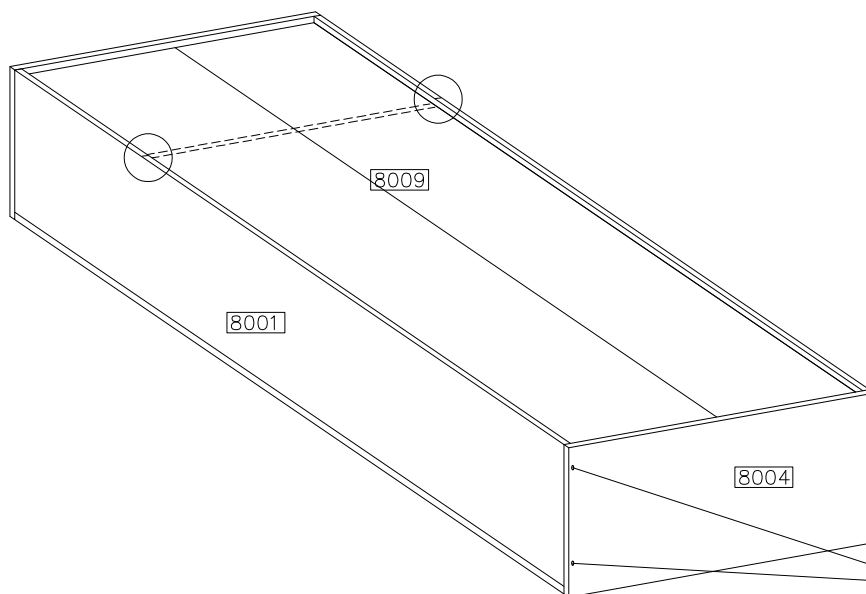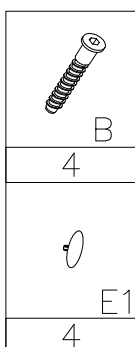


9

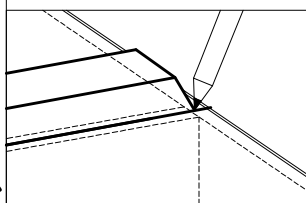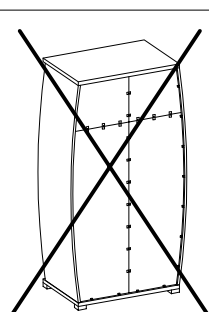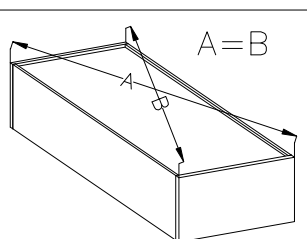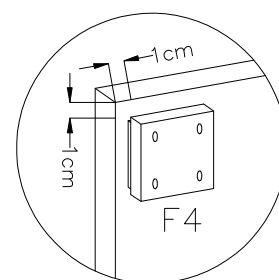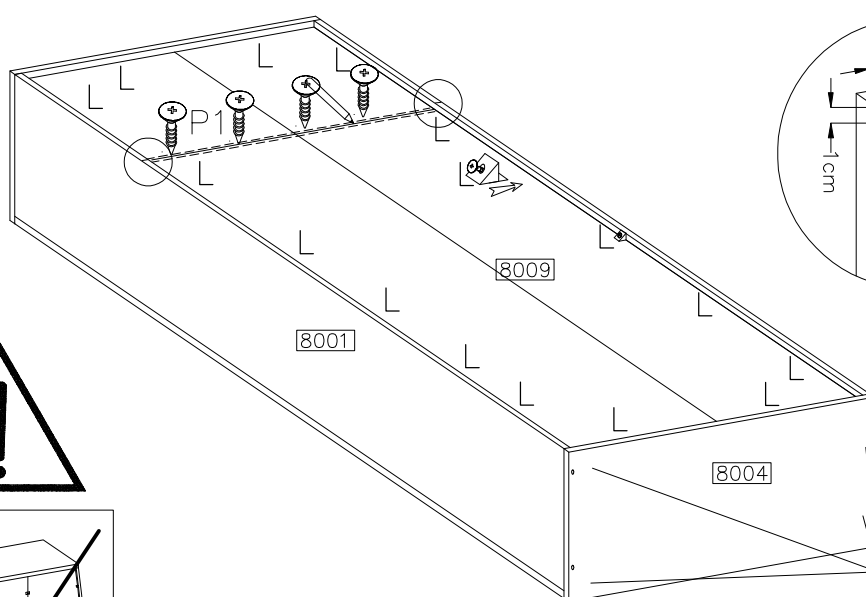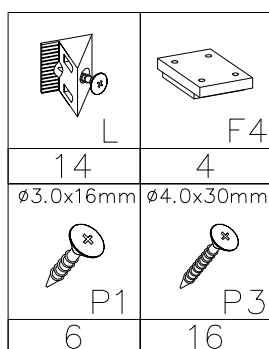


10A

	$\varnothing 3.5 \times 16 \text{ mm}$ 
K5	P4
1	4


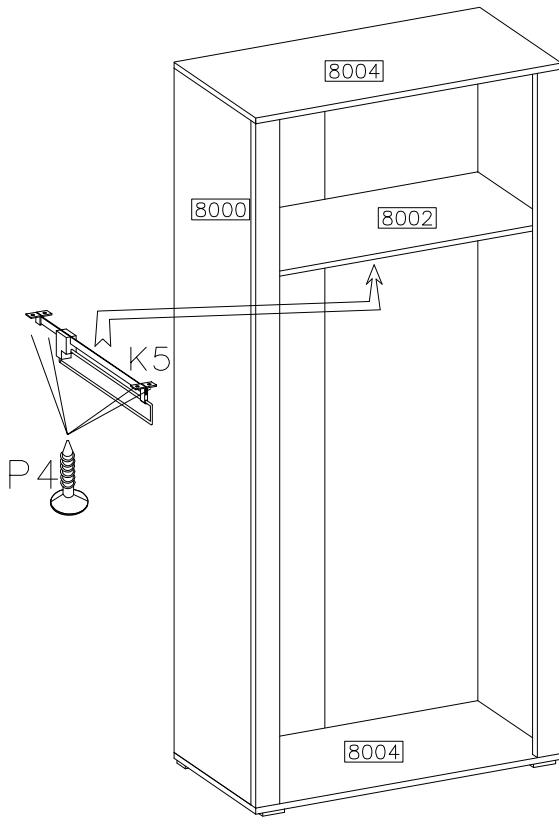


10B

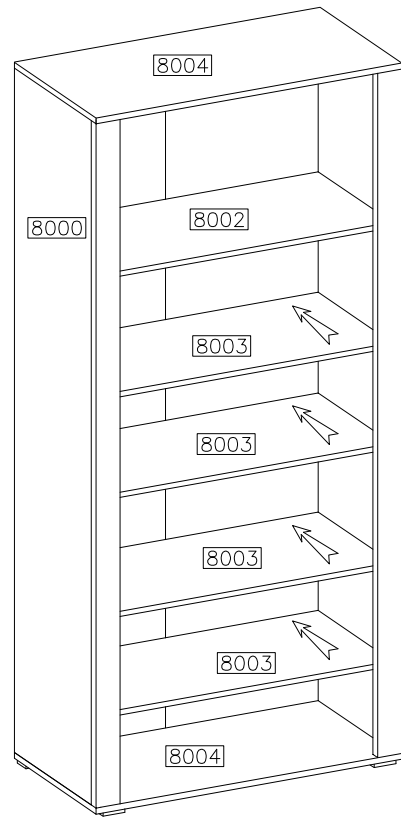






11

$\varnothing 35 / \text{KR}-90$ 	$\varnothing 5.0 \times 13 \text{ mm}$ 		$\text{M}4.0 \times 22 \text{ mm}$ 	$\varnothing 4.0 \times 16 \text{ mm}$ 	$\varnothing 8 \times 40 \text{ mm}$ 		$\varnothing 15 / 12 \text{ mm}$ 	
G9	P9	S1	R2	P8	A1	D1	C	E
8	16	1	2	4	2	2	2	2





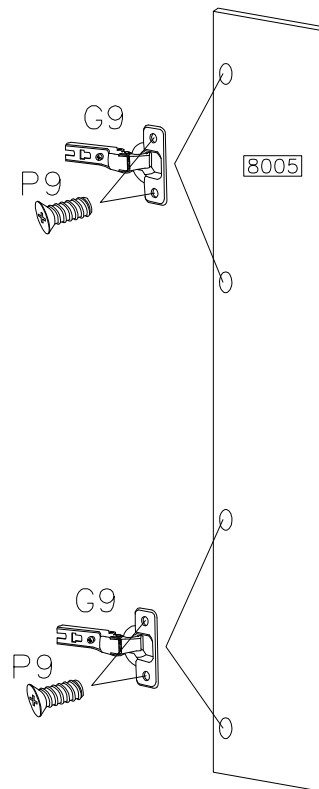
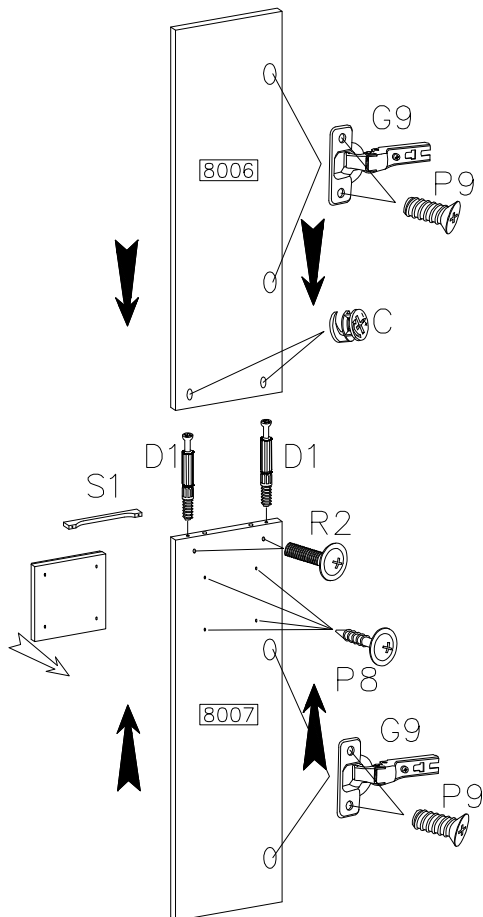



12

	
G11 2	1

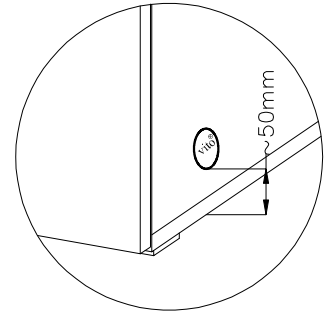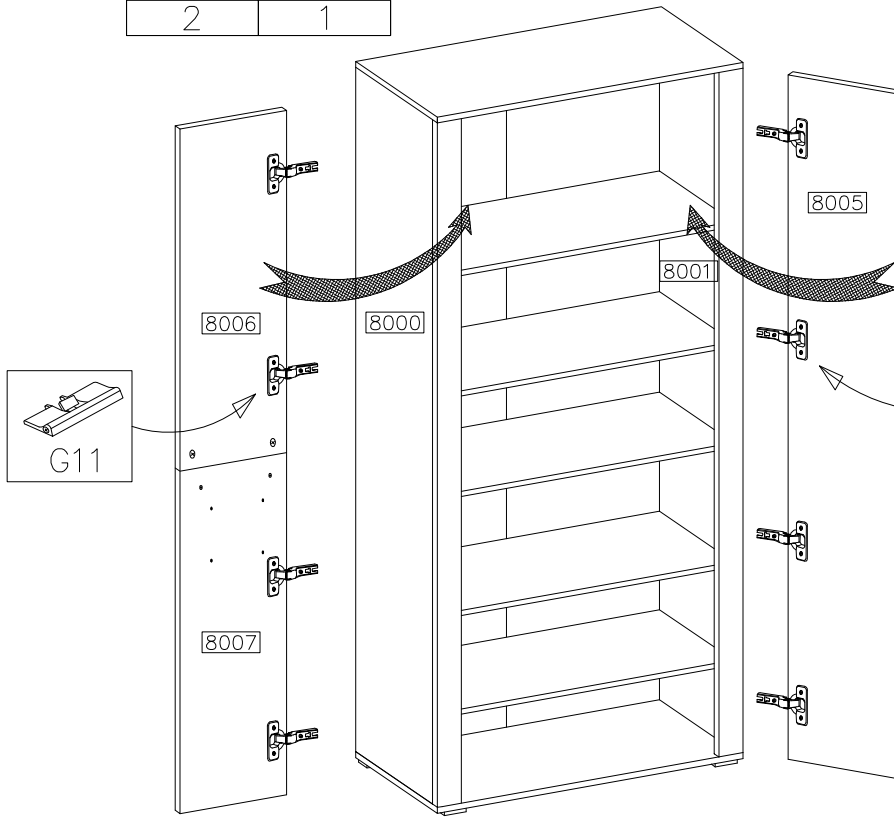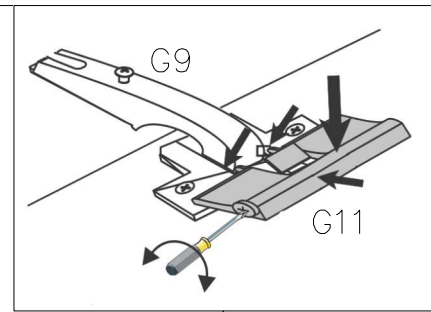

13

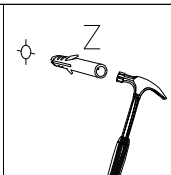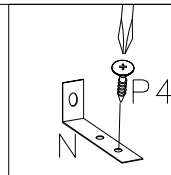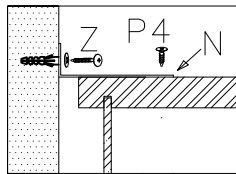

					
1	1	1	1	1	1

