

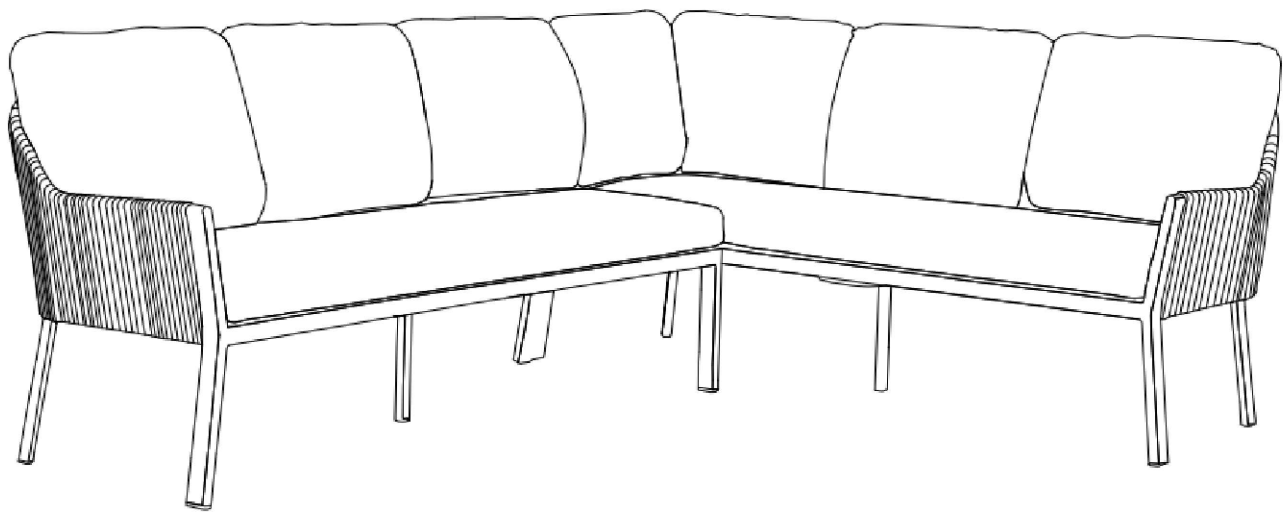







Assembly Instructions

M620	Y	X	Z
			
M6*20 4PCS	2PCS	4PCS	1PCS

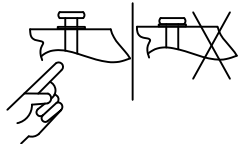

CAUTION: Pre-assemble all the bolts loosely but do not fully turn the bolts into their holes until all bolts are inserted in their holes.

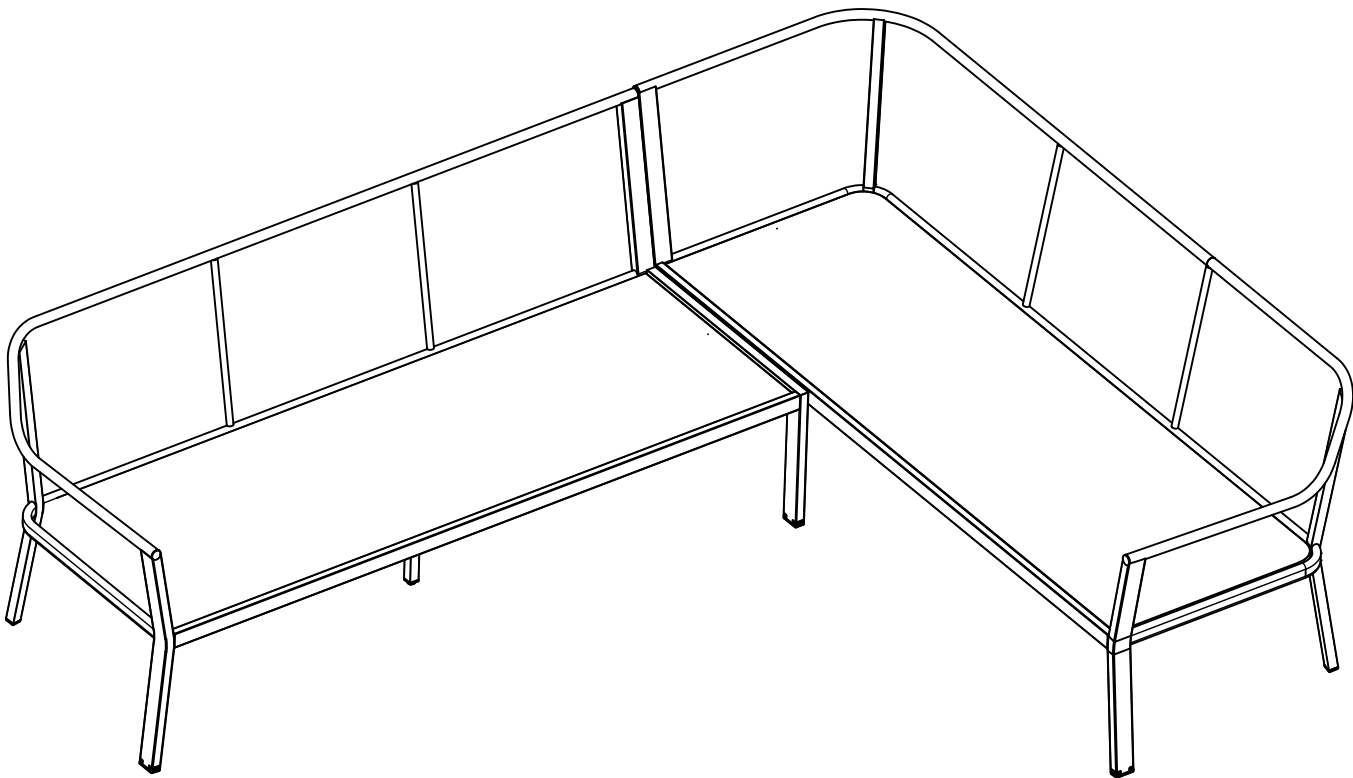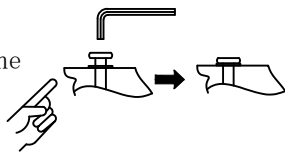

STEP1

