




Assembly instruction model "90xx-2W"
Leg DL08
90xx-2W-DL08



A x 1
03-001212

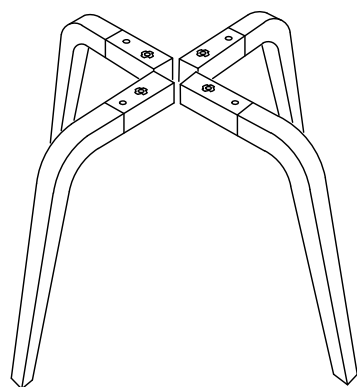

B x 4
WKIZ M6x35
05-001887






C x 4
WKIZ M6x80
05-001892



D x 1
L5
05-002050

1

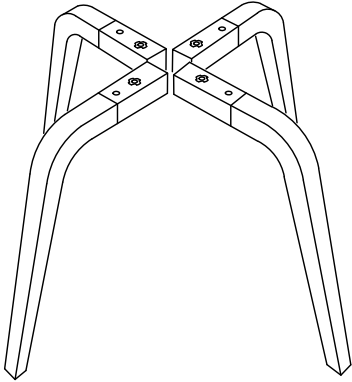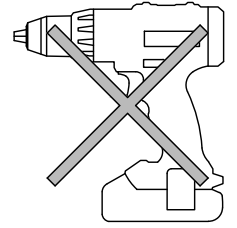

A x 1

03-001212



B x 4


WKIZ M6x35

05-001887




D x 1



L5
05-002050

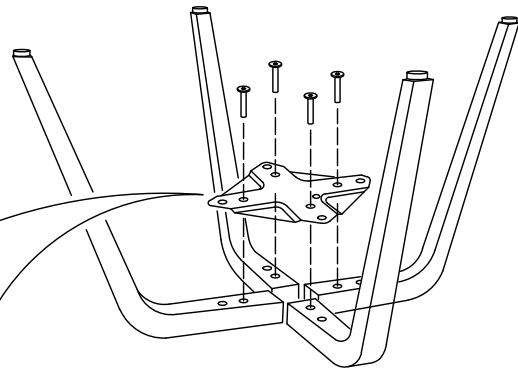

4x

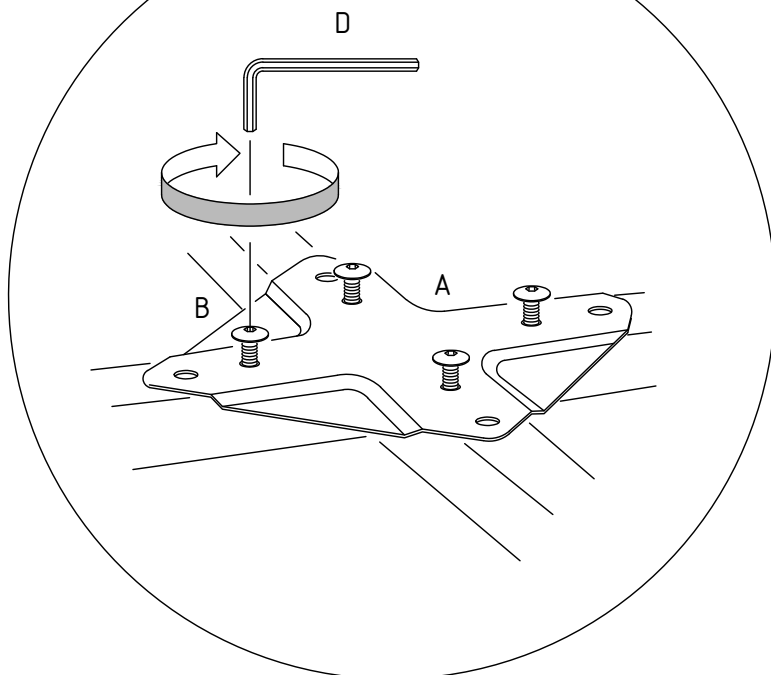

2

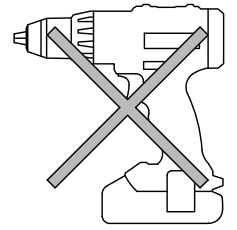

C x 4
WKIZ M6x80
05-001892



D x 1
L5
05-002050

