

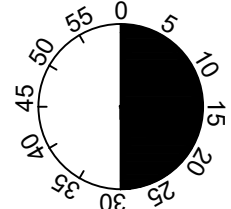
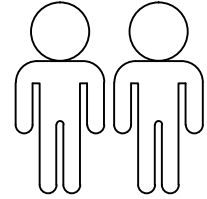



Doreen 1

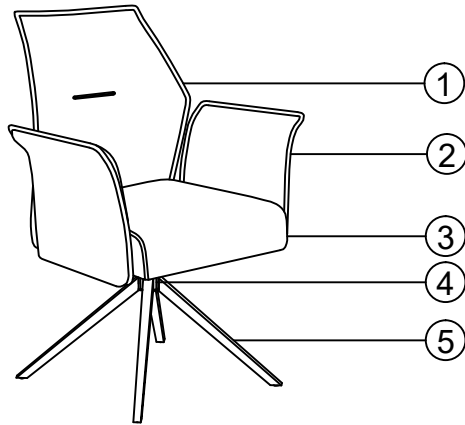


1

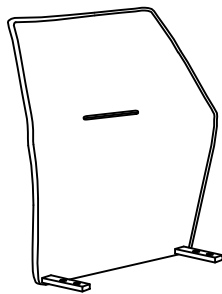


2

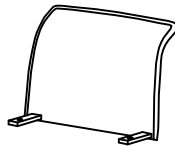

3




4

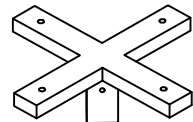


KP 110x110x70mm AR

5

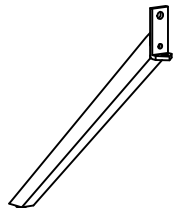


6

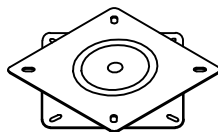



DT 270° AR 175X175mm

1	1x
2	2x
3	1x
4	1x
5	4x
6	1x




1/1

A	M6X13	B	M6X20	C	M6X25	D	M6X30	E	M6X12	F	M8X16
	4x		6x		4x		2x		4x		4x
G	M6	H	Ø18xØ6x1.5	I	4MM	J	5MM	K	Ø18xØ8x10		
	8x		16x		1x		1x		2x		

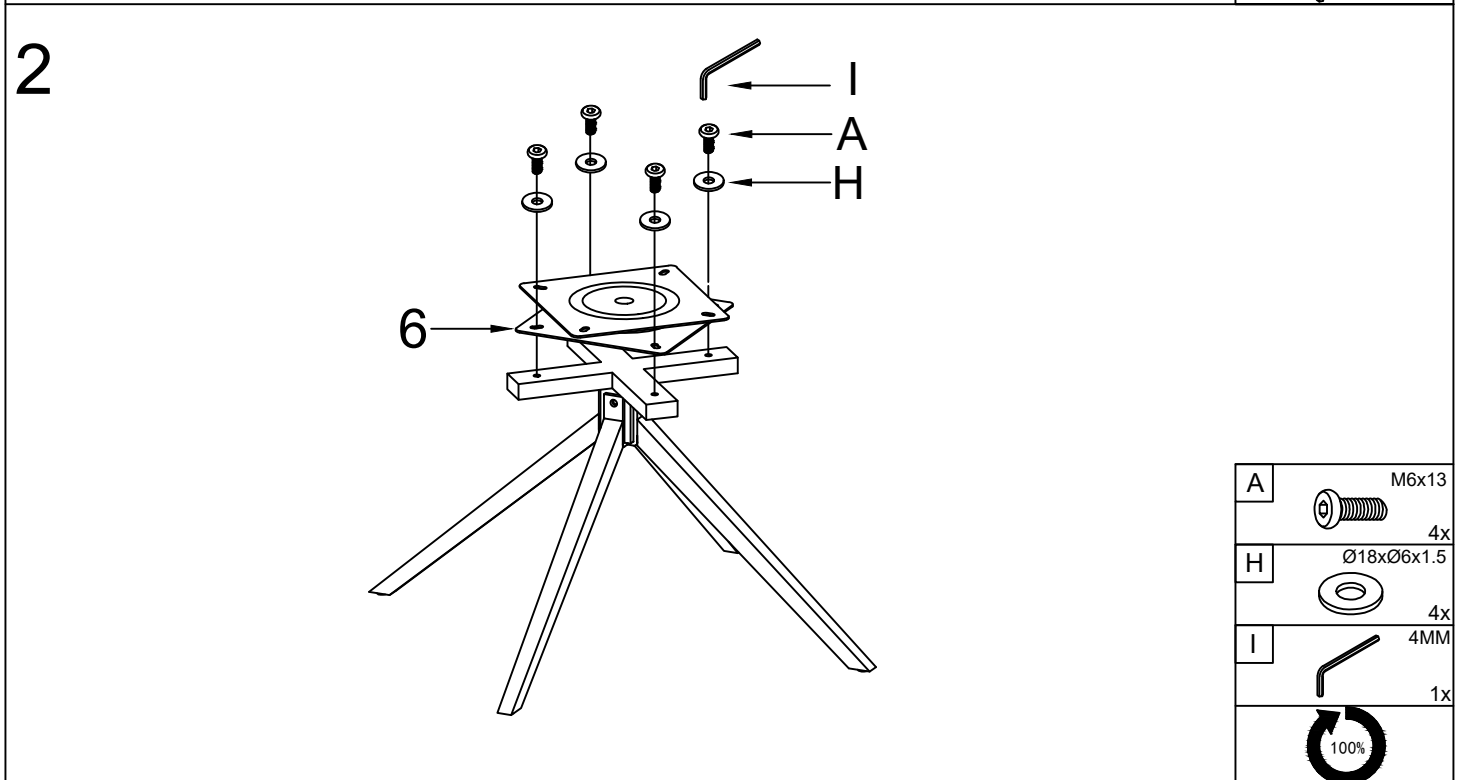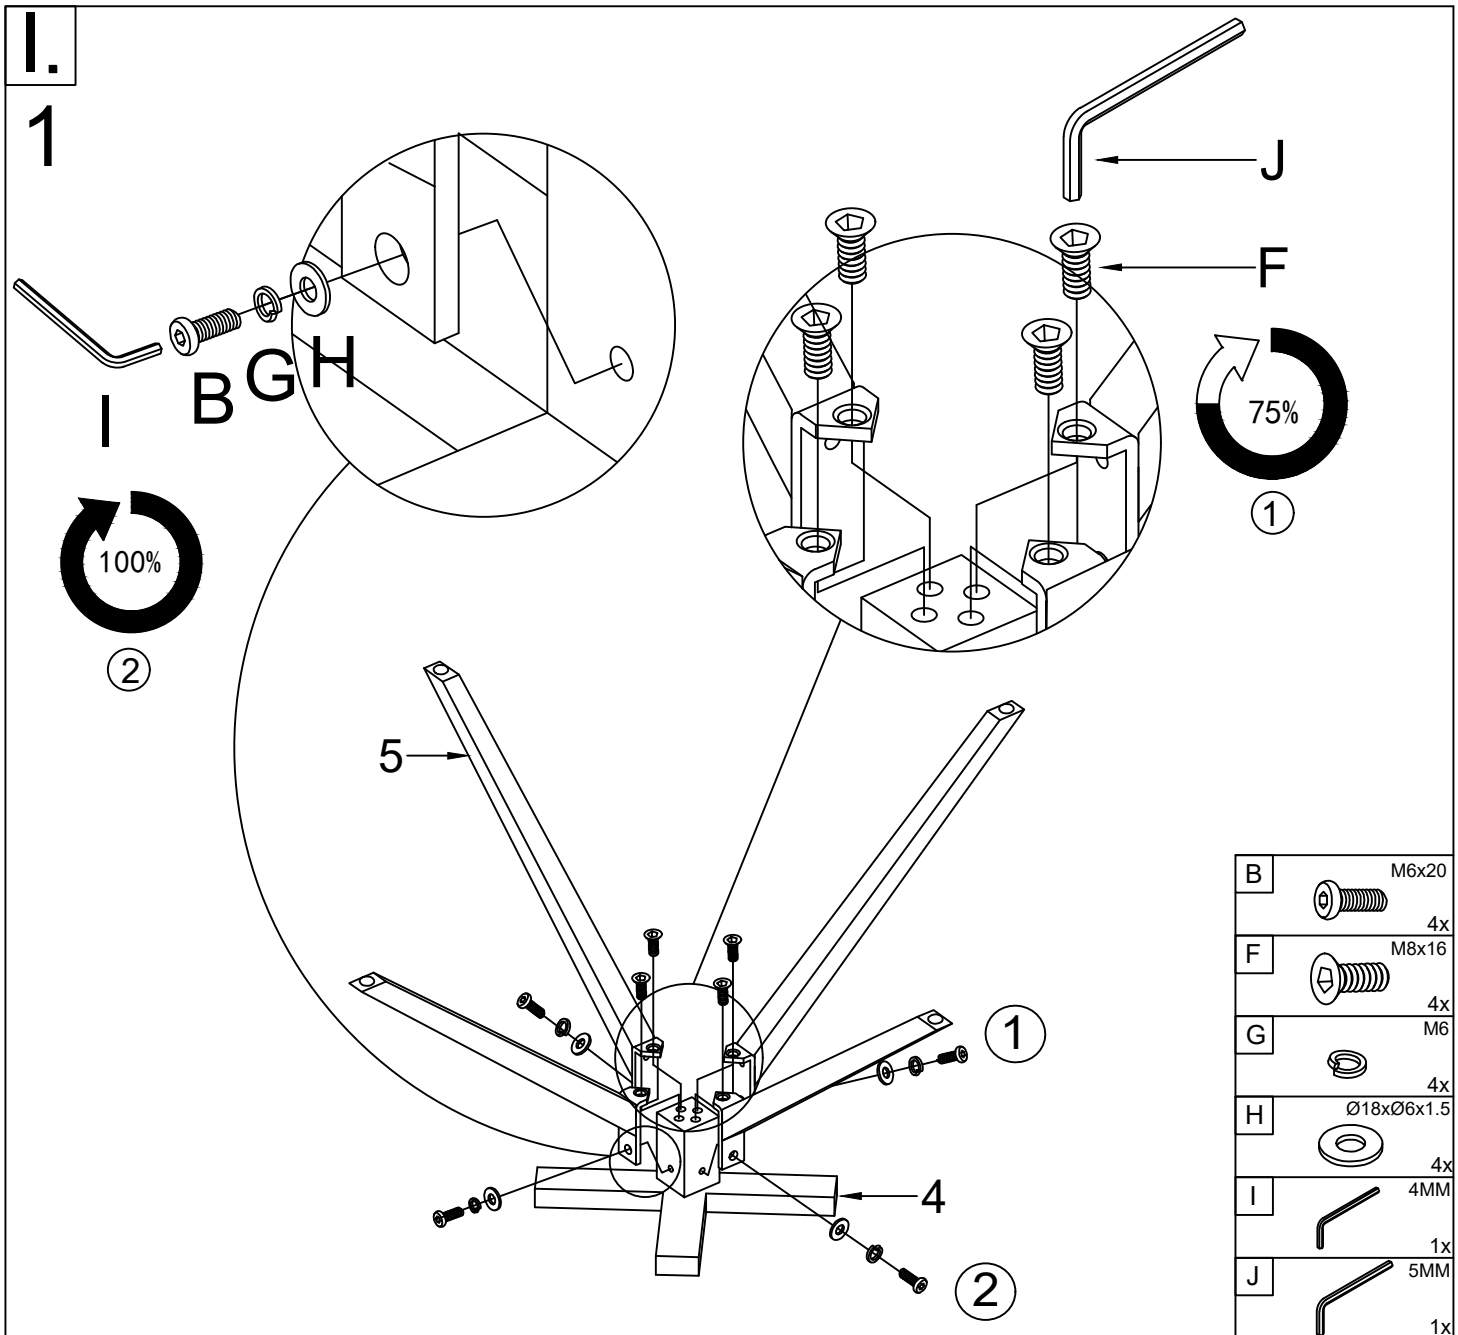


II.

3

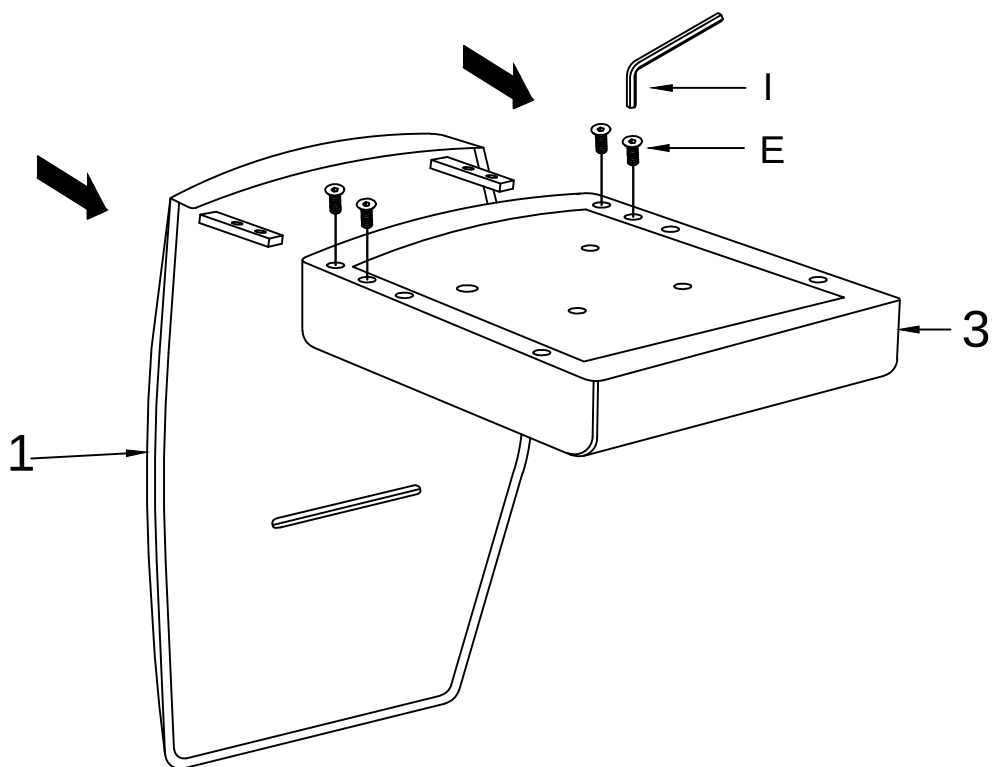

E		M6x12
		4x
I		4MM
		1x
		


4

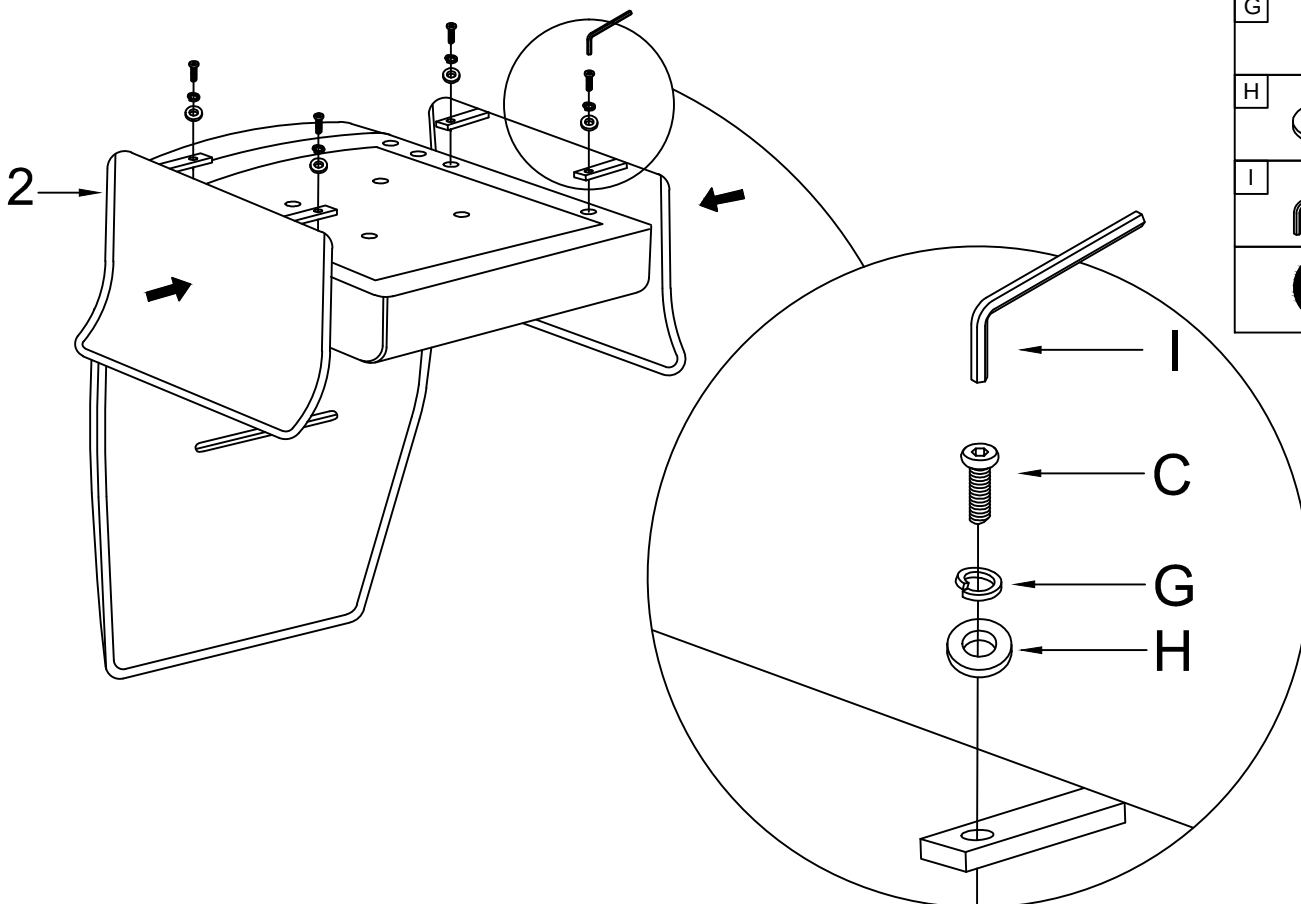

C		M6x25
		4x
G		M6
		4x
H		Ø18xØ6x1.5
		4x
I		4MM
		1x
		


III.

5

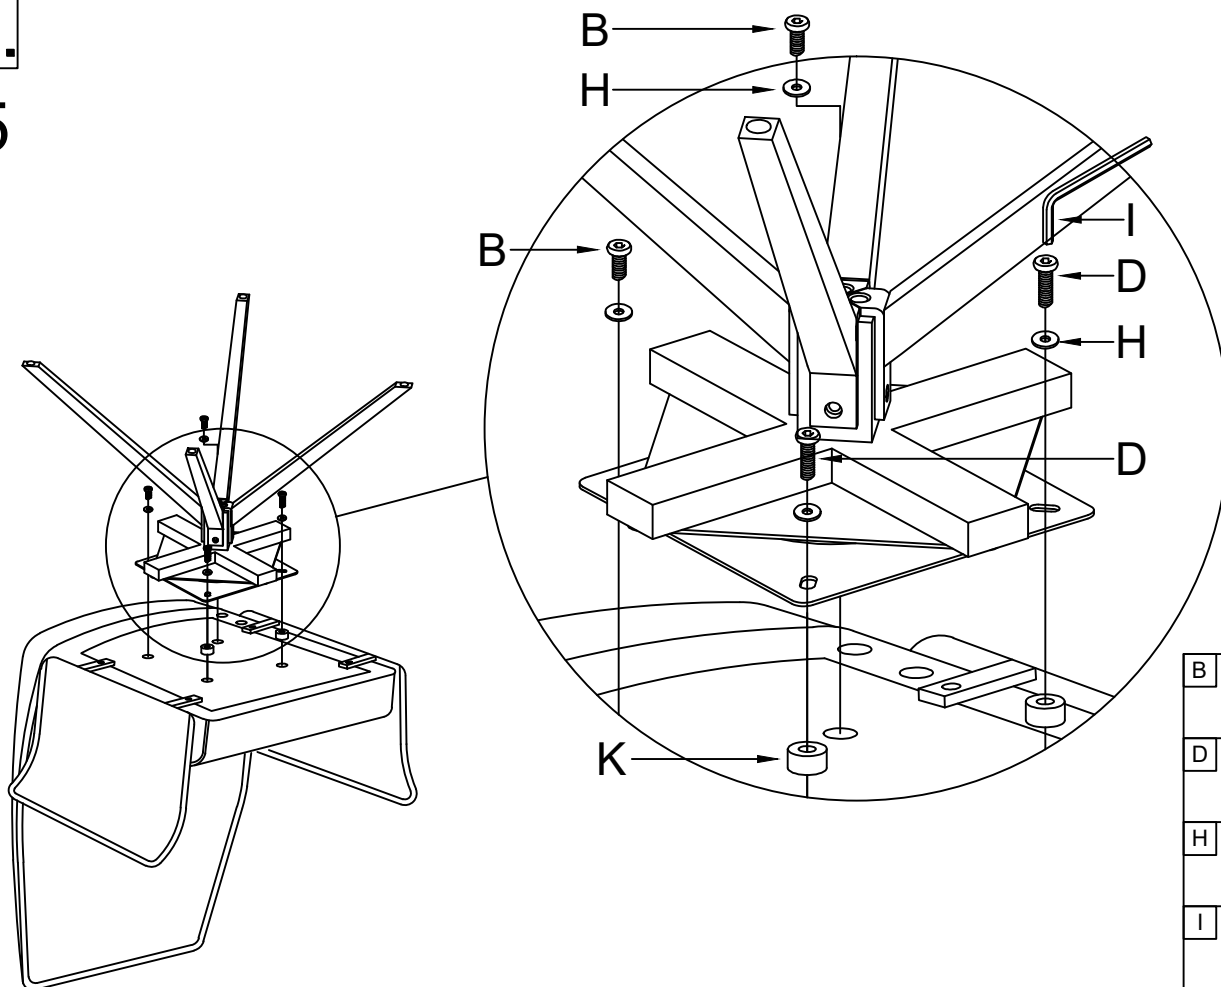

B	M6X20		2x
D	M6X30		2x
H	Ø18xØ6x1.5		4x
I	4MM		1x
K	Ø18xØ8x10		2x
			
I	4MM		1x
			

6

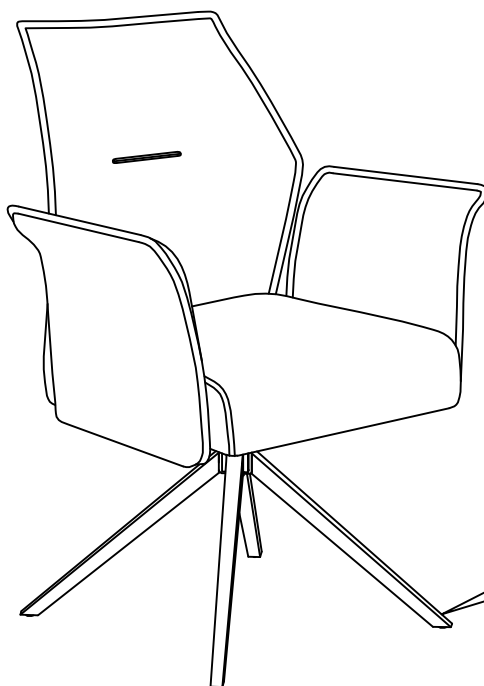

LE TRI
+ FACILE



Séparez les éléments avant de trier